

PROJECT PEN KITS

Stylus Tip Twist Pen Kit

Code: 503499



For more info and
videos scan here

AXMINSTER

woodturning

WHAT'S REQUIRED

Bushing Set: **8.5 mm O/D
(as supplied with mandrel) (100793)**

Drill Bit Size:
7 mm

Minimum Blank Size:
16 mm x 16 mm x 112 mm

PREPARING THE BLANKS, HINTS & TIPS

Preparing a wooden or acrylic/polyester blank for a pen mandrel.

1. Cut a blank to the length of each tube plus approximately 2.5mm to allow for trimming and squaring off the ends.
2. Mark the centre on the end of the blank.
3. Using the recommended drill bit, drill a hole lengthwise through the blank.
4. Apply epoxy glue, Polyurethane glue or gap filling cyanoacrylate (super glue) to the tubes.
5. Insert the tube into the blank with a twisting motion to spread the glue evenly inside the hole.

6. Centre the tube lengthwise inside the blank.
7. Allow the adhesive to cure.
8. When cured, square the ends of the blank. Using a barrel trimmer with a guide matching the inner diameter of the tube or a universal pen blank squaring jig with a disc sander.
9. Take the excess material down flush with the ends of the brass tube. (do not trim beyond the length of the tube since this may interfere with operation of the mechanism and assembly).

Tips/Hints

- If using a wooden blank, draw a short pencil line lengthwise across the centre of the blank. This will help maintain grain alignment when mounting the blanks onto a mandrel.
- Excessive pressure may cause the drill bit to wander and/or split the blank. Slow the feed rate and back the drill bit out repeatedly for chip removal.
- Roughen the brass tube slightly with abrasive for better adhesion.
- Certain acrylic blanks are more transparent than others, especially lighter colors or blanks with light colored swirls. To avoid the risk of the brass tube showing through the pen blank, paint the tubes white or black before gluing them in.
- The barrel trimmer guide also cleans any adhesive that may have gotten inside of the tube.

TURNING THE BLANK, HINTS & TIPS

1. Mount the bushings and blanks onto a pen mandrel according to the diagram (If using a wooden blank, check the grain alignment).
2. Secure the bushings and blanks onto the mandrel.
3. Slide the tailstock with a live centre into place against the mandrel and lock in position. This is for support; only slight pressure is required.

4. Using sharp tools, turn the blanks down to become the Upper Pen Barrel and Lower Pen Barrel with profiles of your choice.
5. Turn the blanks very slightly oversize, then sand and polish the ends down to the same diameter as the bushings.
6. Using successively finer abrasives gradually sand and polish both Pen Barrels.

7. Finish both Pen Barrels with your preferred choice of polish.

Tips/Hints

- Don't be afraid to sharpen frequently especially when turning acrylics.



Continues over...

ASSEMBLY, HINTS & TIPS

1. Layout parts according to diagram A, ensuring the turned Barrels are the same orientation as when mounted on the mandrel.

Hint: When removing the blanks from the mandrel, mark the inside of each tube where they join to maintain grain alignment, if using a wooden blank, during assembly.

2. Press the Nib into the bottom end of the Lower Pen Barrel.

3. With the threaded end exposed, press the Twist Mechanism brass end first into the top of the Lower Pen Barrel, only as far as the indentation.

4. To determine if the Twist Mechanism is positioned at the correct depth, thread the Refill into the Twist Mechanism. When properly fitted, approximately 3mm of the writing point shows when the Twist Mechanism is twisted open, and is covered when the Twist Mechanism is twisted closed.

5. If the point does not extend far enough, remove the Refill and press the Twist Mechanism a little farther into the Lower Pen Barrel. Be careful not to press it in too far as the Twist Mechanism cannot be pulled back out.

6. Slide the Centre Ring over the Twist Mechanism.

7. Carefully unscrew retaining ring from the the top of the End Cap and gently tease off the soft stylus tip.

8. Slide Clip onto the stepped end of the lower half of the End Cap. The Clip will only slide on a short distance until pressed into place. Do not attempt to force the Clip all the way onto the End Cap by hand as this may damage the parts

9. Press the Clip/End Cap assembly into the top of the upper Pen Barrel.


10. Replace the soft stylus tip and screw the retaining ring back onto the End Cap (small chamfer at the top).

11. Thread the Refill into the twist mechanism, then gently push by hand the upper and lower Pen barrels together

Tips/Hints

- Use a woodworking vice, one handed bar clamp, arbor press or a dedicated pen press.
- Press parts together slowly and steadily
- When pressing the parts together, CHECK the parts are correctly aligned with each other and straight. If the part is crooked or misaligned, it will result in a poor fit.

DIAGRAM A

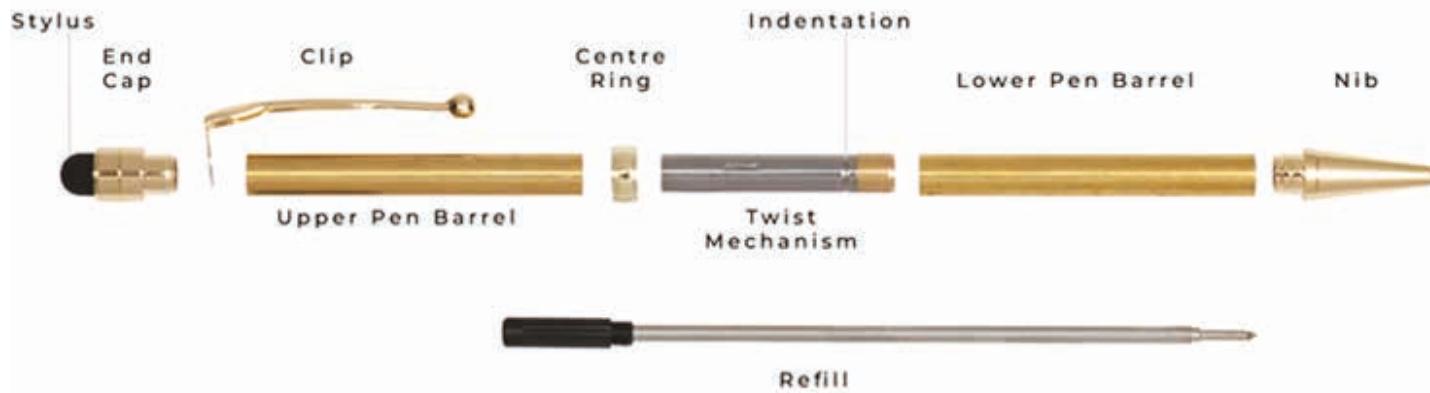

Visit the Knowledge blog 'How To Make A Pen' for hints, tips and videos
knowledge.axminstertools.com/pen-turning



VIEW OUR FULL RANGE OF
PEN CASES AND DISPLAY BOXES ONLINE

Axminster Tools, Axminster, Devon, EX13 5PH

AXMINSTERTOOLS.COM